

The Garmin GNC-250XL Made Easy



To enter in a frequency:

1. Press the **CRSR** button
2. Use the **BIG** knob (outside knob) to change the **BIG** numbers in the highlighted area
3. Use the **SMALL** knob (inside knob) to change the **SMALL** numbers in the highlighted area
4. Press the **←→** button to move the frequency to the **ACTV** space on the upper left hand corner of the display


To go direct to an airport:

1. Press the **→** button on the lower left hand side of the GPS
2. Enter the airport identifier—turn the small knob 1 click to the right, a **K** should appear in the highlighted area. Turn the **BIG** knob 1 click to the right to move the cursor to the next space. Enter the appropriate letter using the small knob, and repeat as above. All airport ID's in the continental US start with a **K**.
3. Press the **ENT** key **TWICE** after you have entered the ID
4. Turn the **BIG** knob 1 click to the right to get the moving map display
5. To change the scale of the GPS map, use the small knob. The lower right hand corner of the display will indicate the scale, anywhere from .5 miles to 300 miles.

Active Frequency
(top)
Standby Frequency
(bottom)

Distance to
Waypoint

Ground Speed

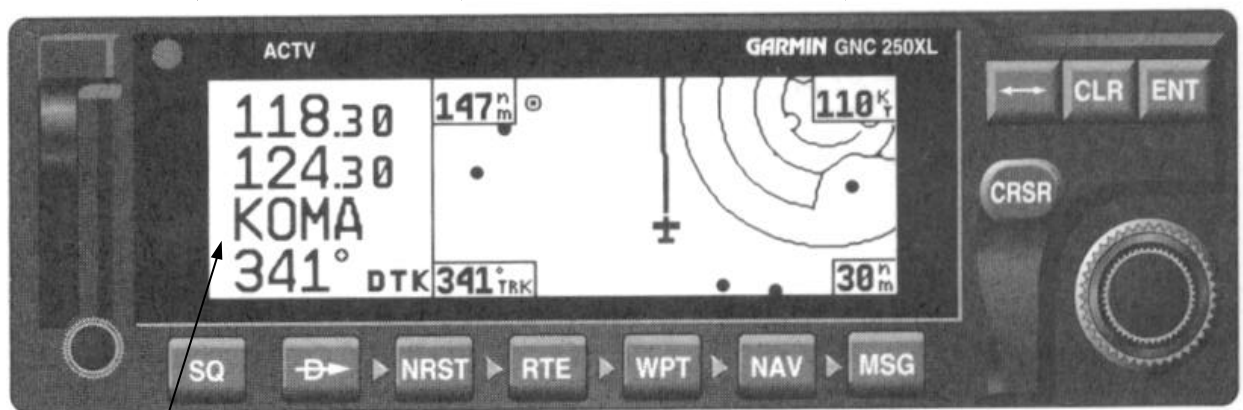

Destination
Airport

True Course

Current Track

Map Scale